



5-18V Hall senzor na konektorju ATF13;

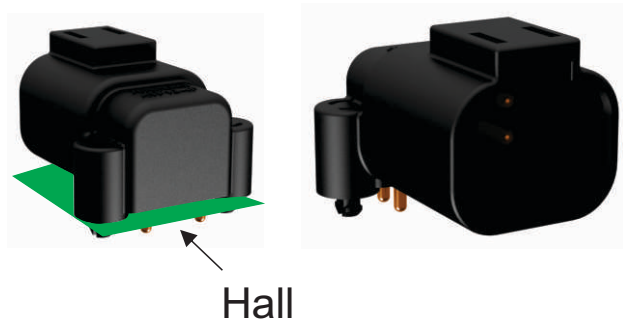

- Napajanje 12V (5Vdc - 18Vdc)
- Konektor ATF13-4P-BM03

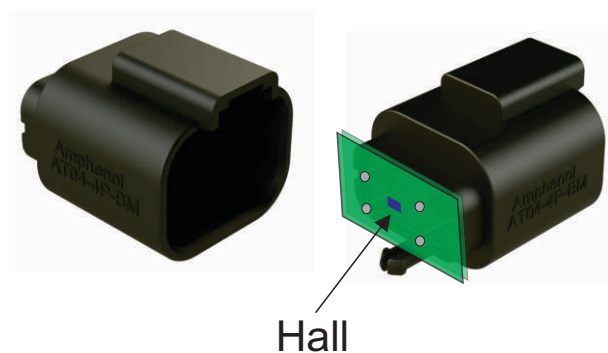

- Napajanje 12V (5Vdc - 18Vdc)
- Konektor AT04-4P-BM04